

Weighted Shade Cap Installation



Weighting the Shade Cap

Correctly Positioning the Weight

The stainless steel weight (P/N: 2300-510) should always be positioned so that the countersunk holes on the weight's front side (below) are directed away from the Shade Cap when securing the weight to the End Cap.

- 2) Secure the stainless steel weight to End Cap using the screws provided.

Note: Make sure not to cross thread the screws when securing the weight to the Shade Cap's End Cap.

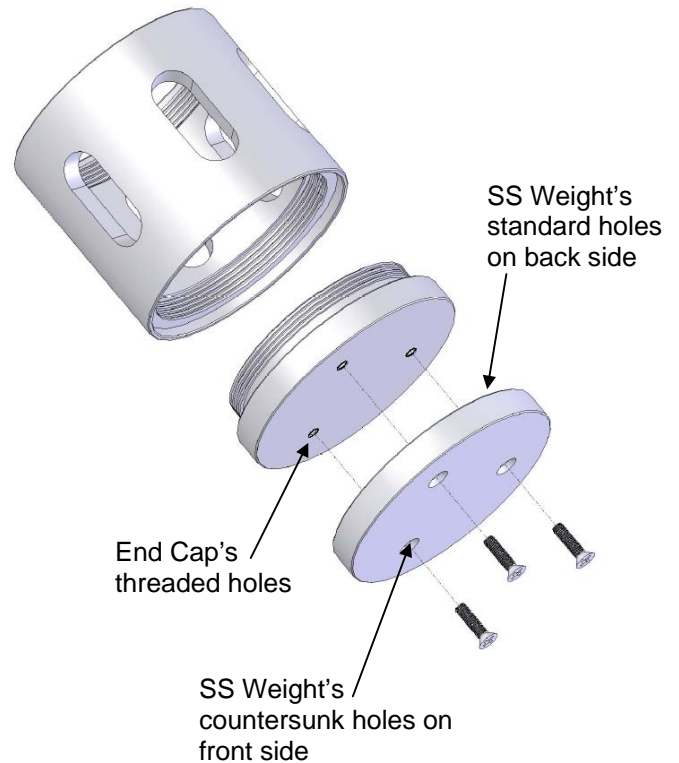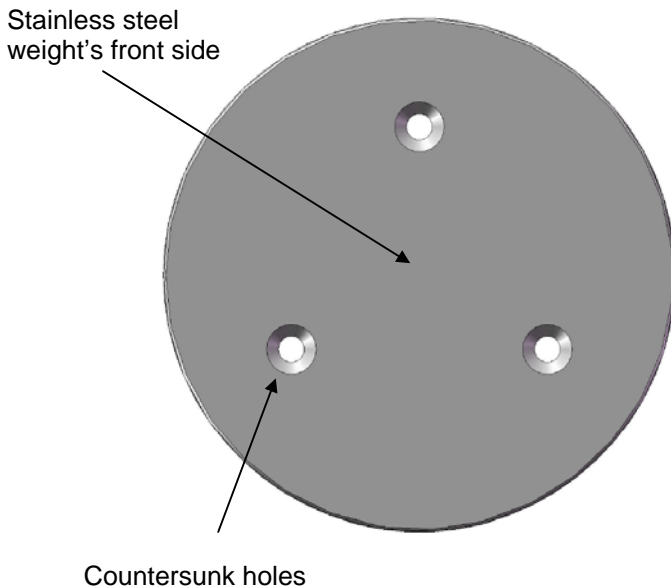

Installation

- 1) Align the stainless steel weight's standard holes with the End Cap's threaded holes making sure that the countersunk holes are facing away from the End Cap.
- 3) The stainless steel weight is fully secured when the screw heads sit flush with the stainless steel weight's front side (face).

**TURNER
DESIGNS**

845 W. Maude Ave. Telephone 408-749-0994
Sunnyvale, CA 94085 Toll Free 877-316-8049
www.turnerdesigns.com Fax 408-749-0998



Printed on Recycled Paper